

Size:110*150mm

Front

Back

Snowfall Led Light

Thank you for purchasing this product. Please read all instructions and warnings carefully before use. Failure to follow all instructions listed may result in electric shock, fire or serious injury.

FOR YOUR SAFETY:

- Carefully remove the product from the packaging without stretching or damaging the lights.
- Do not illuminate the product whilst it is in the packaging.
- Make sure that the cable is completely unravelled and that there are no twists or snags in the cable.
- Position the cable so that it does not present a snagging or tripping hazard.
- Take care not to damage the cable or fittings.
- Choose a suitable location for your lights and make sure that the socket you decide to use is close enough to the area you wish to decorate and that the cable will reach the socket without becoming an obstacle or hazard.
- This product is for indoor and outdoor use but please ensure that the power supply unit remains indoors at all times.
- Do not operate this product in excessive weather conditions.
- Do not operate this product when the power supply unit overheat or become wet.
- Please ensure that the product are not covered and have adequate airflow.
- This product must only be used with the supplied power supply unit. Use of any other power supply unit may damage the light set and may create a risk of fire or injury.
- Do not connect this product electrically to another product by cutting or joining sets together.
- Do not expose to direct heat, flame or submerge in water.
- Do not use this product if the insulation or cable is damaged. If the cable is damaged, the product must be discarded.
- Always unplug from the mains supply whilst installing or maintaining.
- Disconnect the power supply unit from the mains when not in use.

SNOWFALL 4 MODE:


The button that control the Snowfall Led Light is Located on the back of the product.

To turn on the lights press the button once.Press the button again to change the Snowfall setting

- Snowfall 4 mode
- Snowfall spinning
- Snowfall spinning(slow)
- Snowfall spinning(fast)
- Snowfall fixed

Specification

Input Voltage:100-240V 50-60Hz
 Output voltage:10V/6W
 Ingress Protection:Indoor/Outdoor
 Led Power:3X2 W
 Cord Length:5m

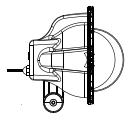

Snowfall led Light



Stake Adaptor



Thumbscrew



Fastener




Outdoor Stake



AC Adaptor

Operation:

- 1:Gently push the outdoor stake into the ground
- 2: Attach the outdoor stake adaptor . Slide the thumbscrew into position
- 3:Secure the thumbscrew with the included fastener . Adjust the arm toward the outdoor stake and tighten the thumbscrew
- 4: Connect Snowfall Led Light to the outdoor stake

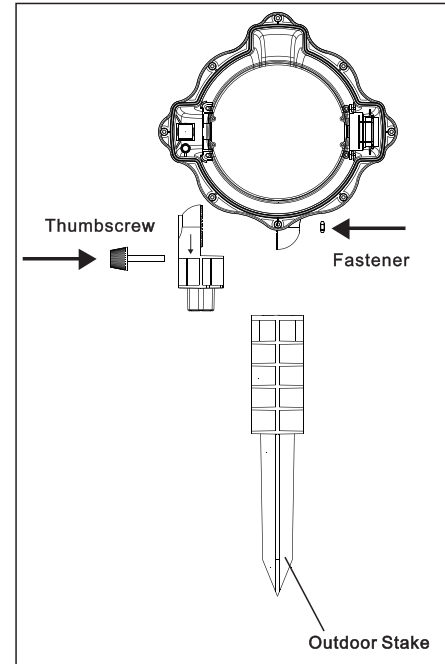

WARNING:

THIS IS NOT A TOY. KEEP OUT OF REACH OF CHILDREN.
 PLEASE RETAIN THIS BOX FOR CORRECT STORAGE AND FUTURE REFERENCE.
 PLEASE TEST THAT THE PRODUCT ARE FULLY FUNCTIONAL BEFORE INSTALLATION.