

WIFI Instruction (For IOS iPhone)

- Connect with power and light



Connect with transformer

Connect with light chain

Voltage: 5-36V

Min electric current: 200mA at least.

 
Max electric current: 1A for each outlet connect and total 2A.

- Install App




Please scan the QR code which is stucked backside of the wifi receiver, and then install App.

You can also search "Magic Twinkle" in APP store.

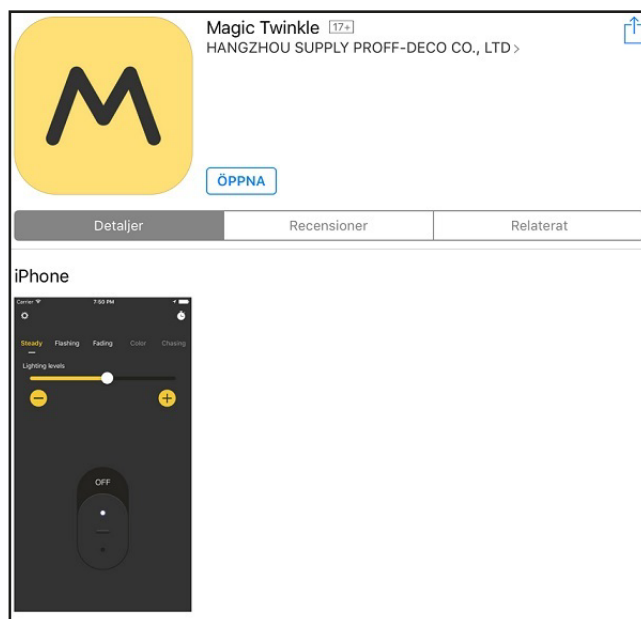


Connect with Wifi

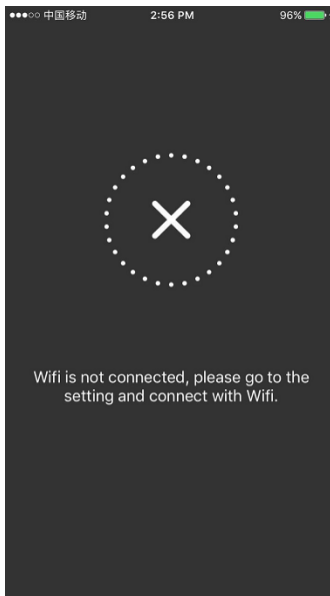 


When you open the APP in the first time, it will remind you go to the setting of WLAN.



 
Make sure turn on the WLAN and choose "Magic Twinkle", original password is 00000000. Distance: you can receive wifi signal in any direction within about 20 meters away from wifi receiver.

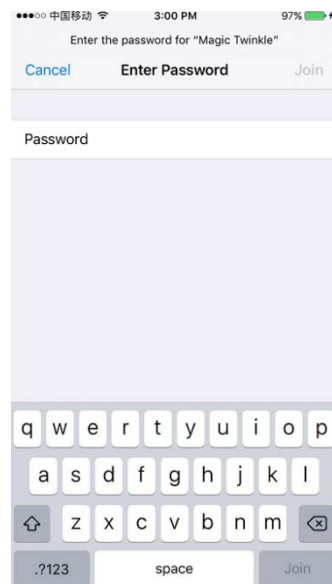

 After you connect with Wifi successfully, return back to the App and it will show function page.

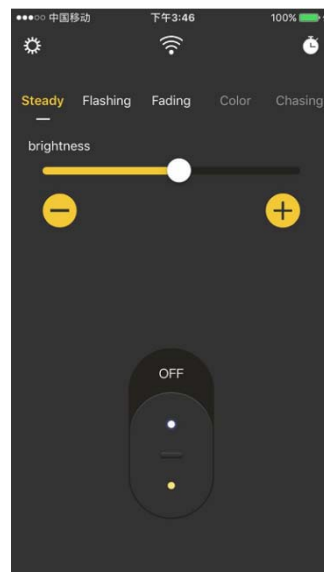

Choose the function which you like

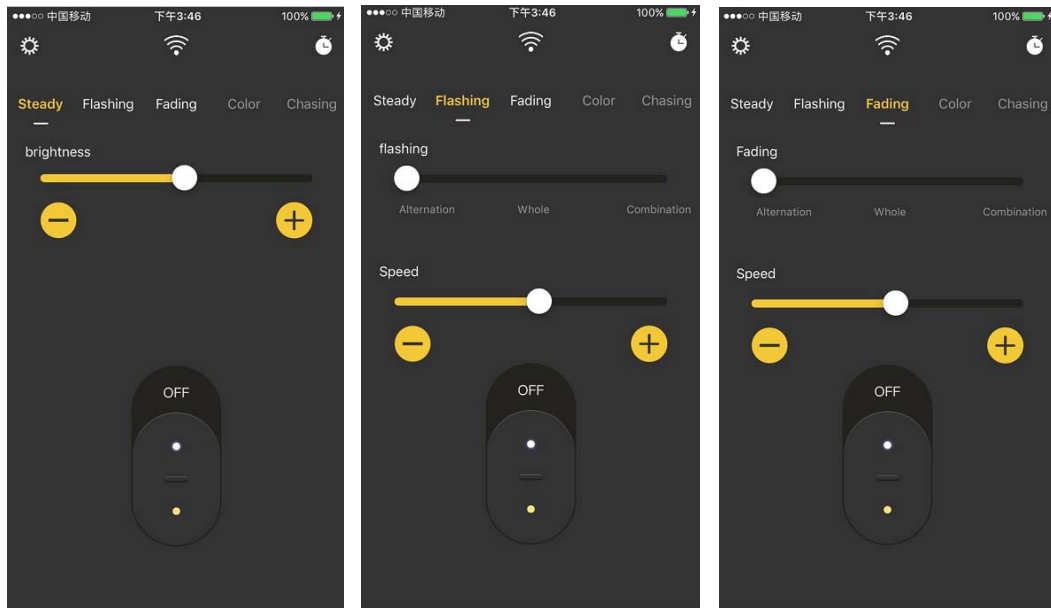 

Now there are 3 workable functions: steady, flashing, fading, you can choose brightness, or speed and etc..

Alternation: there are two wires light, one wire light flashing or fading 3 times, the other wire light keep steady. Then the flashing or fading light change to steady and steady light change to flashing or fading 3 times.

 
Whole: Two wires light chain flashing or fading together.

Combination: Alternate + whole+ steady / Alternate +whole.....


Timer




Timer is on the top right corner. Choose the function firstly and then enter timer.

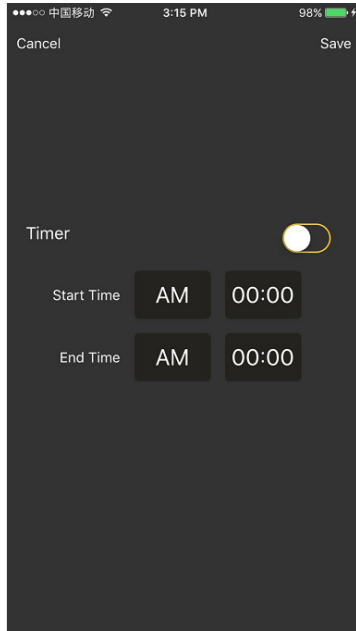

 
Please turn on timer switch firstly. Then set time and save. After you save it, the function will be remembered. The function for timer won't be changed until you reset timer and save.

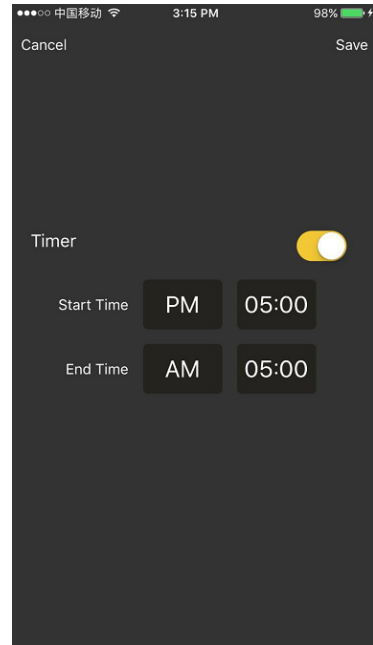

 After you save the timer, it will return to the function page.

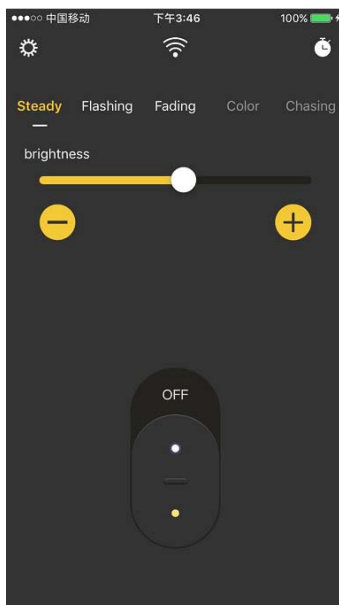


 Please turn off the light. Then the light chain will light up according to timer. Note: After turn off the light, you will see function move to steady. But it won't change the saved function of timer.

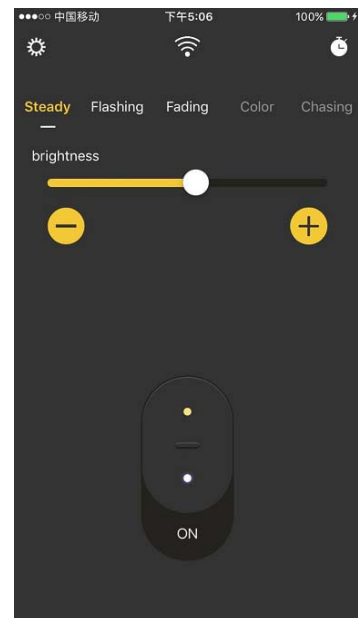




Set App

 It is very important to change to your own Wifi name and password.

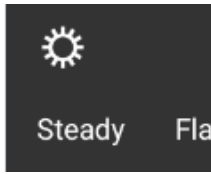


Press the top icon and you can set your own user name and password or choose language.

   
Change Wifi name

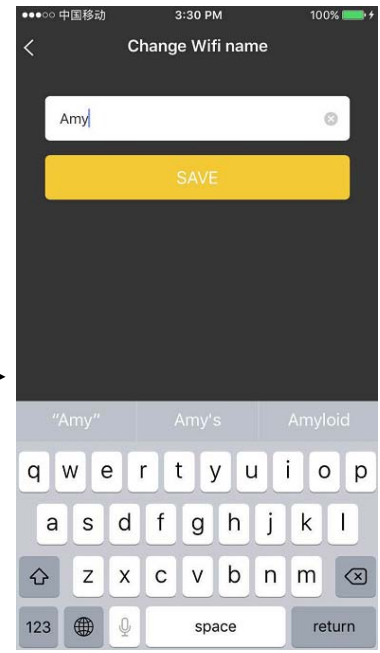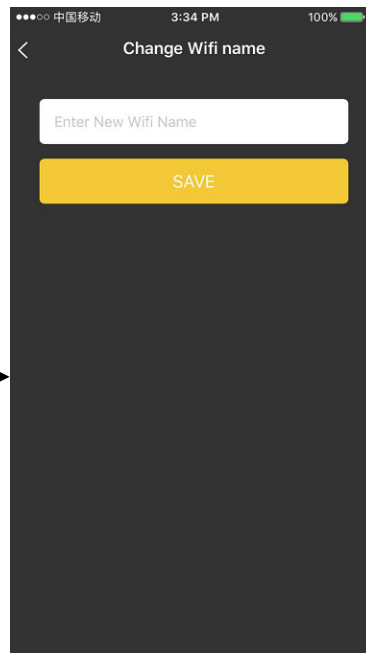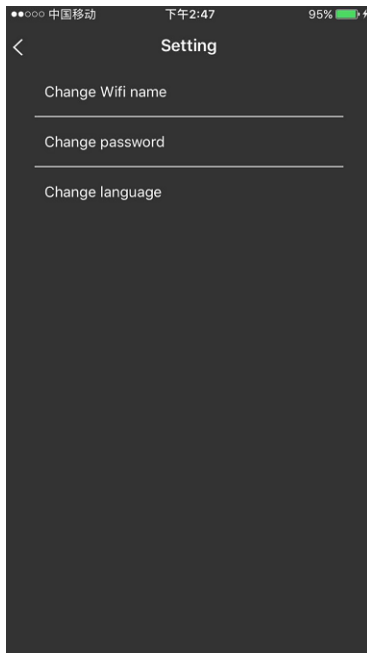

 When you save your new wifi name successfully, please reconnect with your new wifi name.

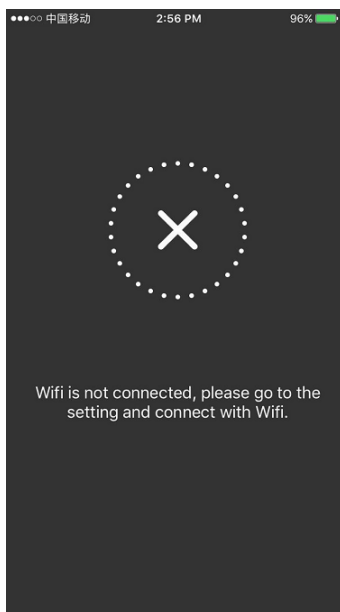


 Please go to the setting and connect with your new wifi name and use the password "00000000" if you have not changed password yet.

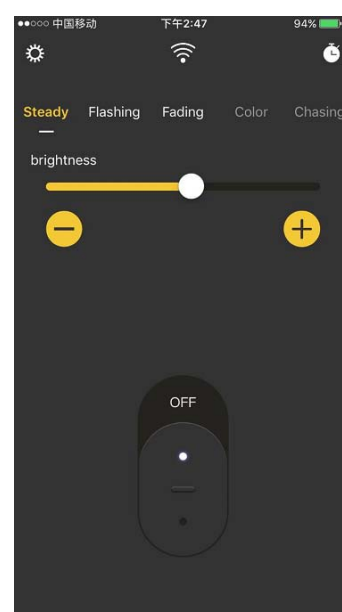


Set App

 
➤ Change password

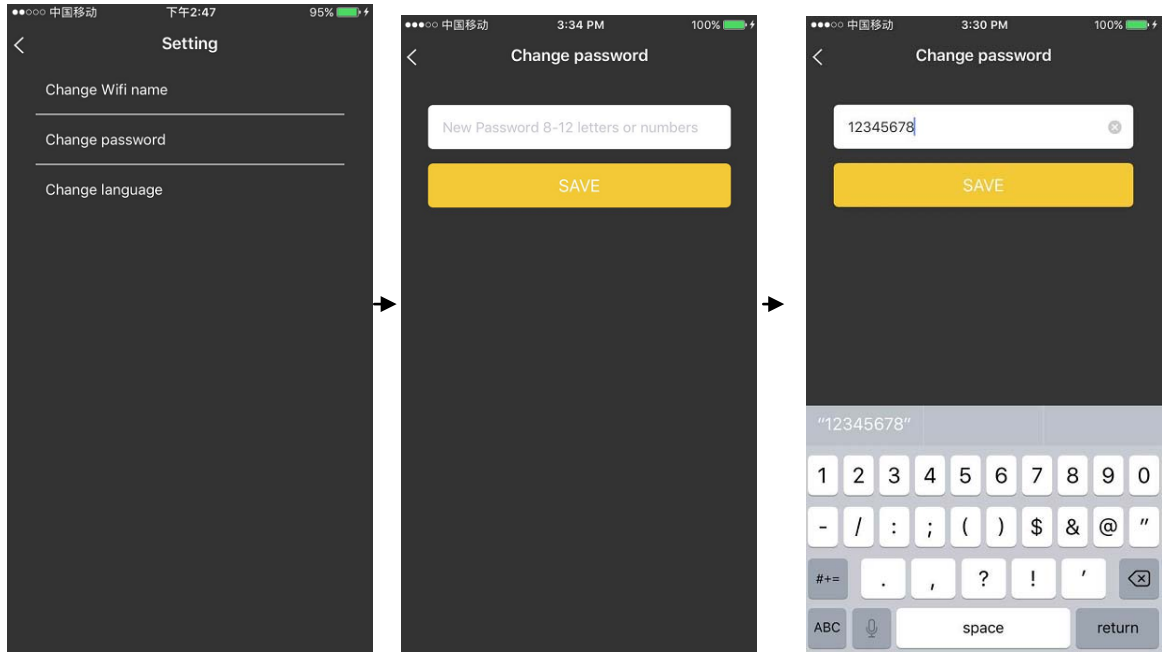

 When you save your new password successfully, please reconnect with your existing wifi name.

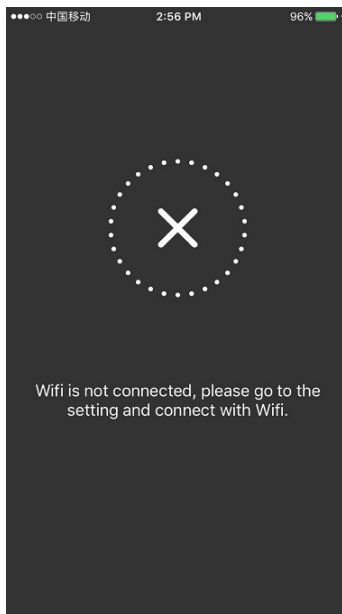


 Please go to the setting and connect with your wifi with **new password.**

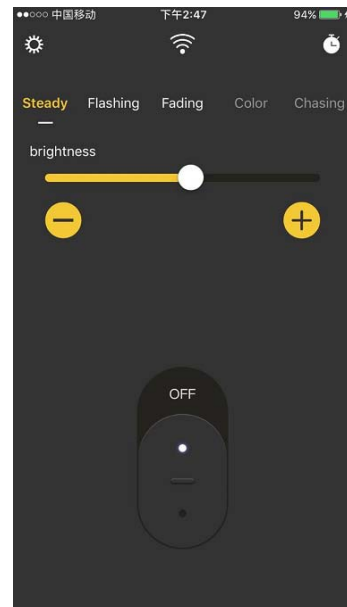

- Set App

 ➤ Change language

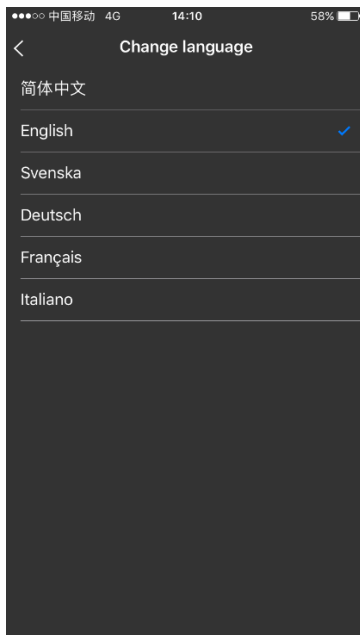

We have six version languages: Chinese, English, Swedish, German, French, and Italian. After you choose the language, please exit APP and double click "Home" button to close the APP completely. When you enter APP again, the language will be changed to which you choose.

- Reset with button



There are three buttons on the surface of the wifi receiver:

Mode, +, -

Mode: long-pressing 10 seconds can reset wifi receiver. The light will flash one time when it is successful reset. Short press can change the functions.

+ or - : press them to change the brightness or speed.

- Update version

App will be updated if there are some bugs need to be optimized or we add some new functions. Normally, your mobile phone app store will remind you it has updated version. Or you can also delete it and re-install the APP.

- Troubleshooting instructions

1. If you can't connect with APP successfully, please make sure your wifi name and password are correct.
2. If you forget your password, please long press the button "MODE" on the wifi receiver and reset it, then wifi name and password change to the original ones.

3. If you can connect with APP successfully but can't enter into the APP, please try to forget this WLAN and reconnect it. Or you need to enter mobile phone setting, reset network settings. Then reconnect with APP.
4. If you can't control APP, please make sure there is only one Android mobile phone or only one iPhone connect with it. You can't have two Android mobile phones or two iPhone connect with APP meanwhile.
5. If you find APP can't control the receiver, the condition looks like stuck, then you'd better plug out the whole lights and plug in again. And make sure reconnected the WLAN correctly.

STAR TRADING AB

APR.21,2017

WIFI Instruction (For Android mobile phone)

- Connect with power and light



Connect with transformer

Connect with light chain

Voltage: 5-36V

Min electric current: 200mA at least.

 
Max electric current: 1A for each outlet connect and total 2A.

- Install App




Please scan the QR code which is stucked backside of the wifi receiver, and then install App.



You can also search "Magic Twinkle" in Google play store.

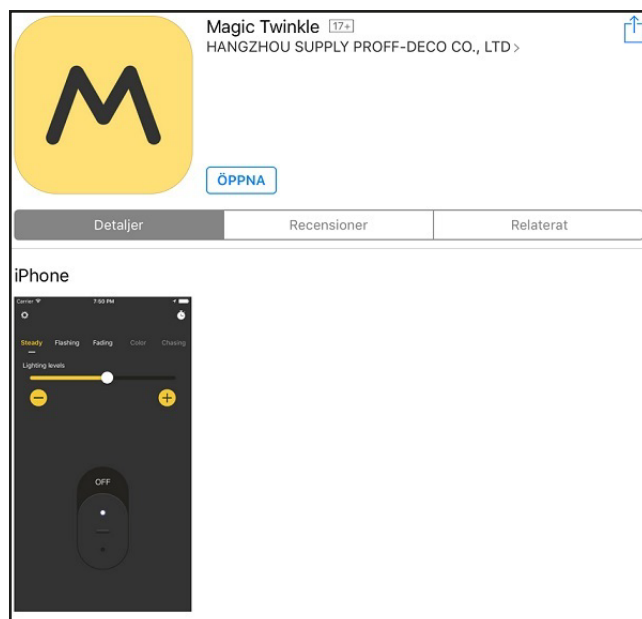


Connect with Wifi

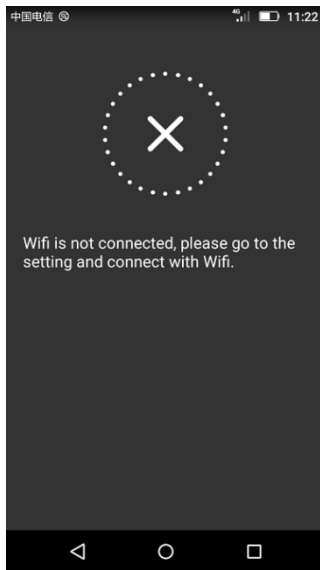 

  When you open the APP in the first time, it will remind you go to the setting of WLAN.

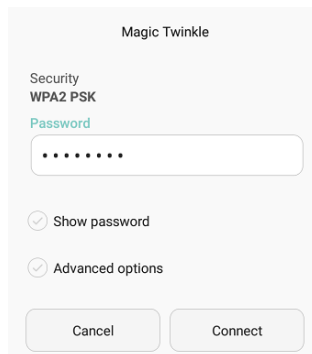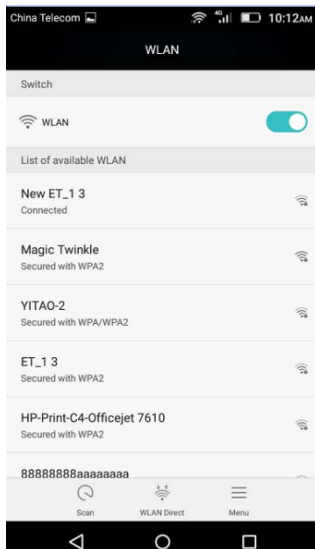


 Make sure turn on the WLAN and choose "Magic Twinkle", original password is 00000000.
Distance: you can receive wifi signal in any direction within about 20 meters away from wifi receiver.

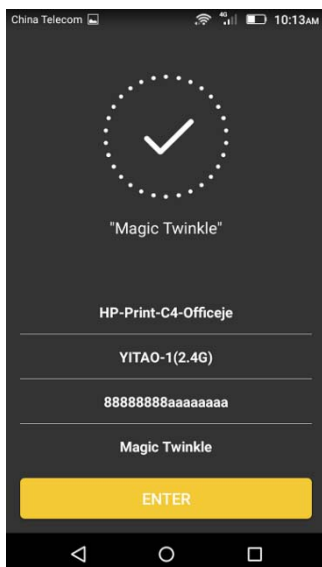

Return back to the WIFI app and ENTER APP.

 Choose the function which you like

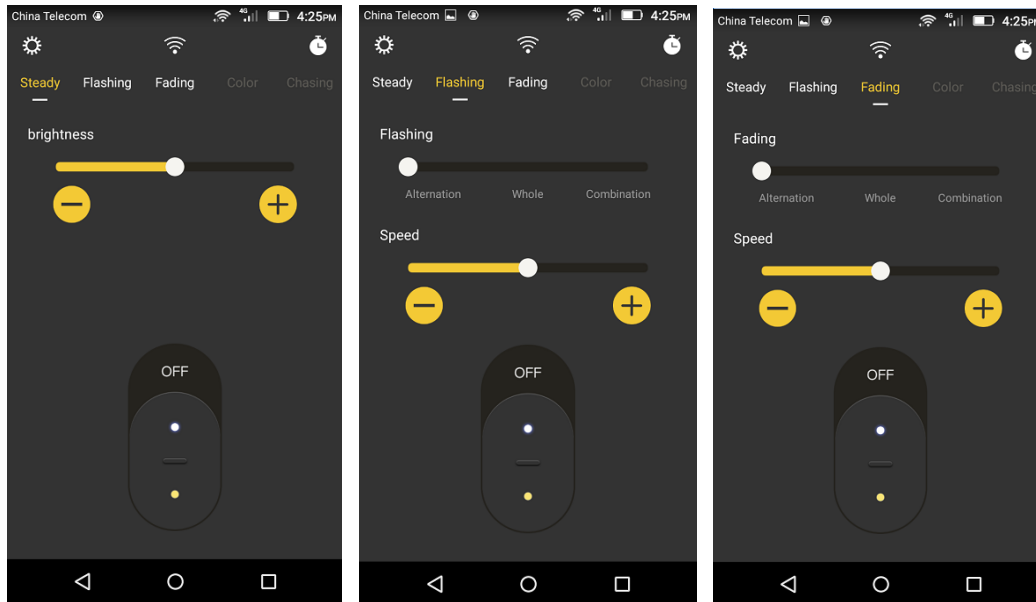


Now there are 3 workable functions: steady, flashing, fading, you can choose brightness, or speed and etc..

Alternation: there are two wires light, one wire light flashing or fading 3 times, the other wire light keep steady. Then the flashing or fading light change to steady and steady light change to flashing or fading 3 times.


Whole: Two wires light chain flashing or fading together.

Combination: Alternate + whole+ steady / Alternate +whole.....

 
Timer

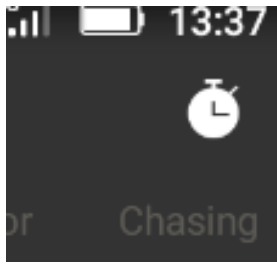

 
Timer is on the top right corner. Choose the function firstly and then enter timer.

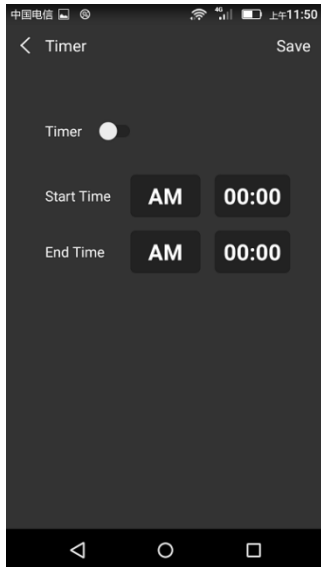

 
Please turn on timer switch firstly. Then set time and save. After you save it, the function will be remembered. The function for timer won't be changed until you reset timer and SAVE.

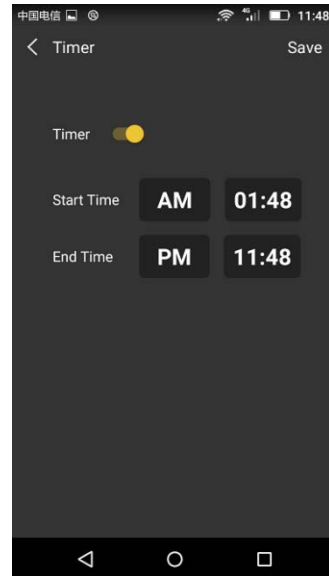

 After you save the timer, it will return to the function page.

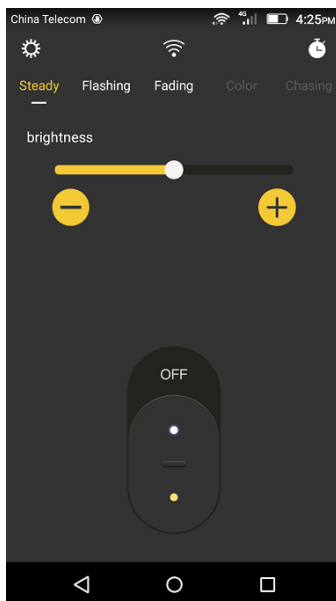


 Please turn off the light. Then the light chain will light up according to timer. Note: After turn off the light, you will see function move to steady. But it won't change the saved function of timer.

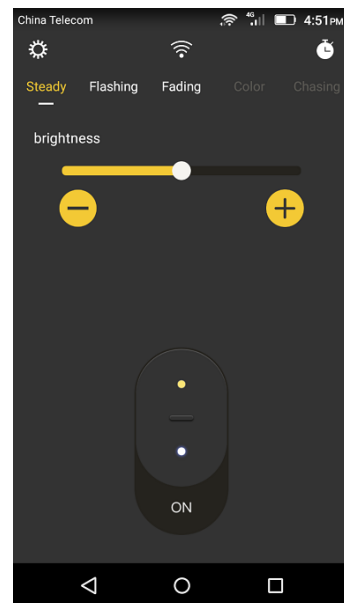


- Set App

 It is very important to change to your own Wifi name and password.

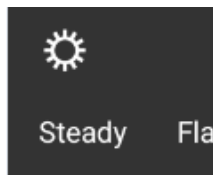


Press the top icon and you can set your own user name and password or choose language.

 
➤ Change Wifi name

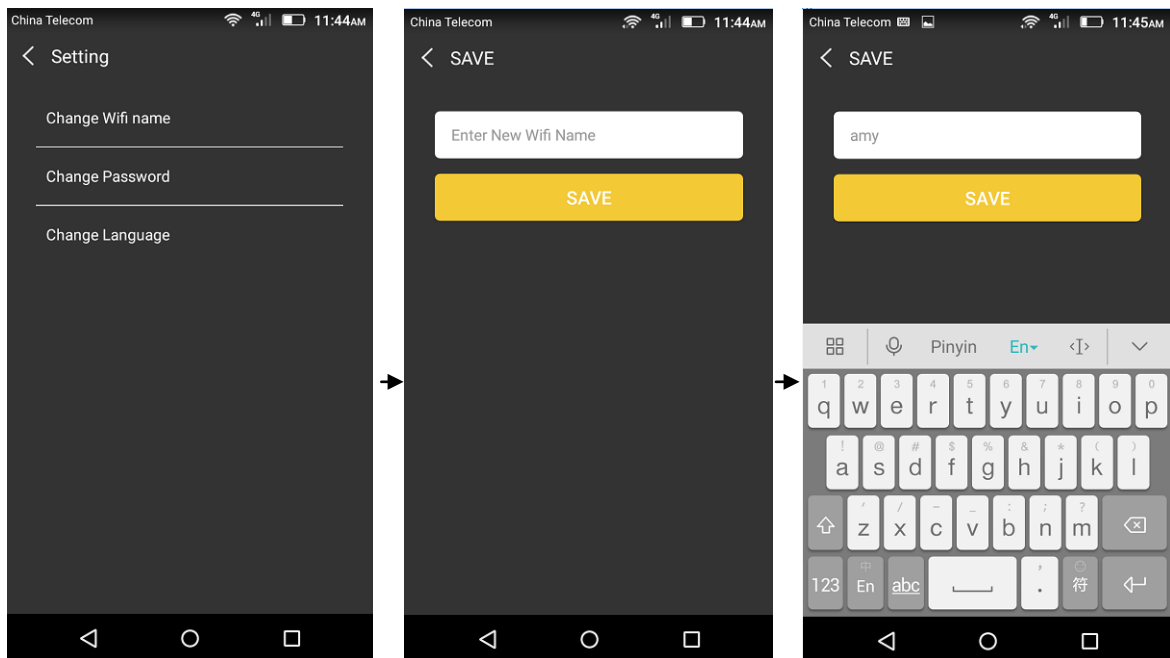

 When you save your new wifi name successfully, please reconnect with your new wifi name.

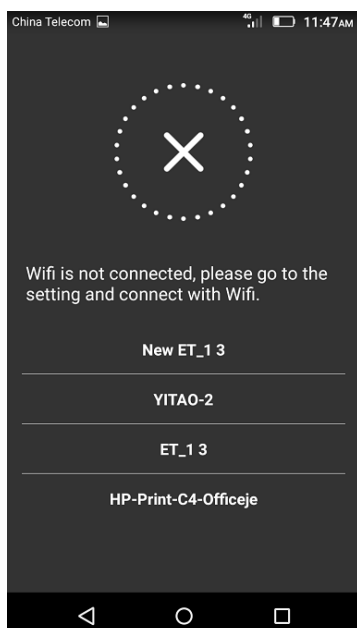


 Please go to the setting and connect with your new wifi name and use the password "00000000" if you have not changed password yet.

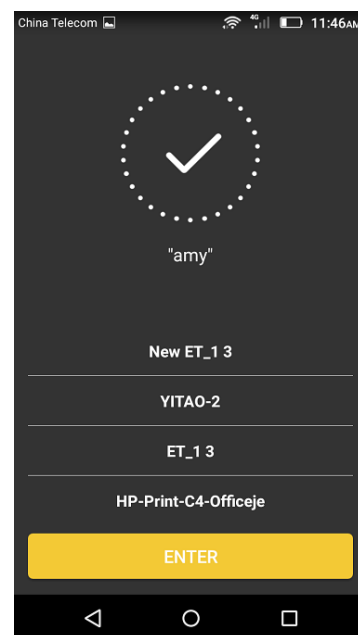


Set App

 ➤ Change password

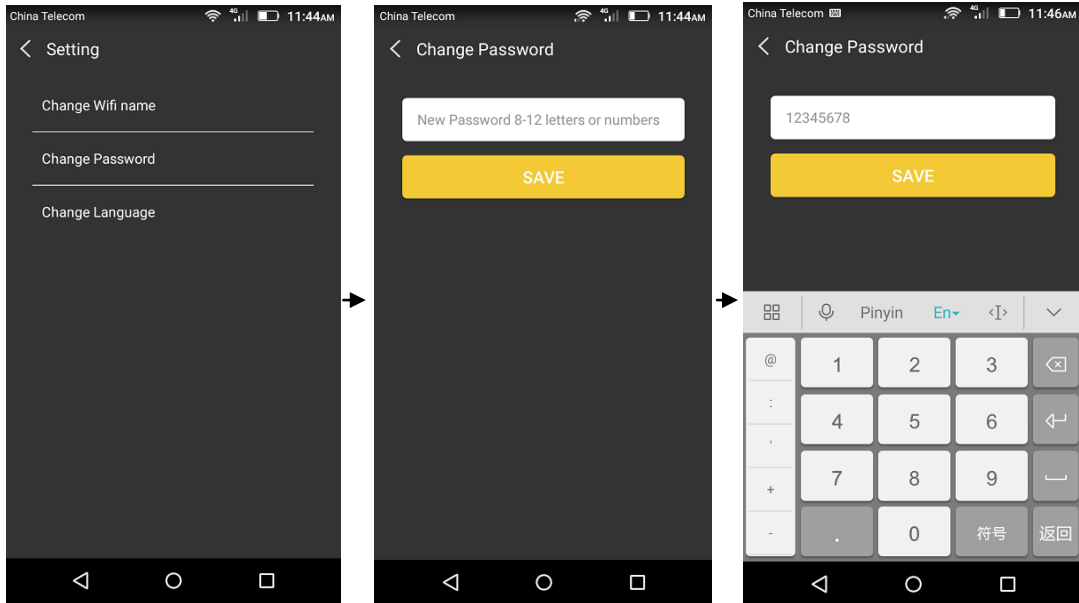


 When you save your new password successfully, please reconnect with your existing wifi name.

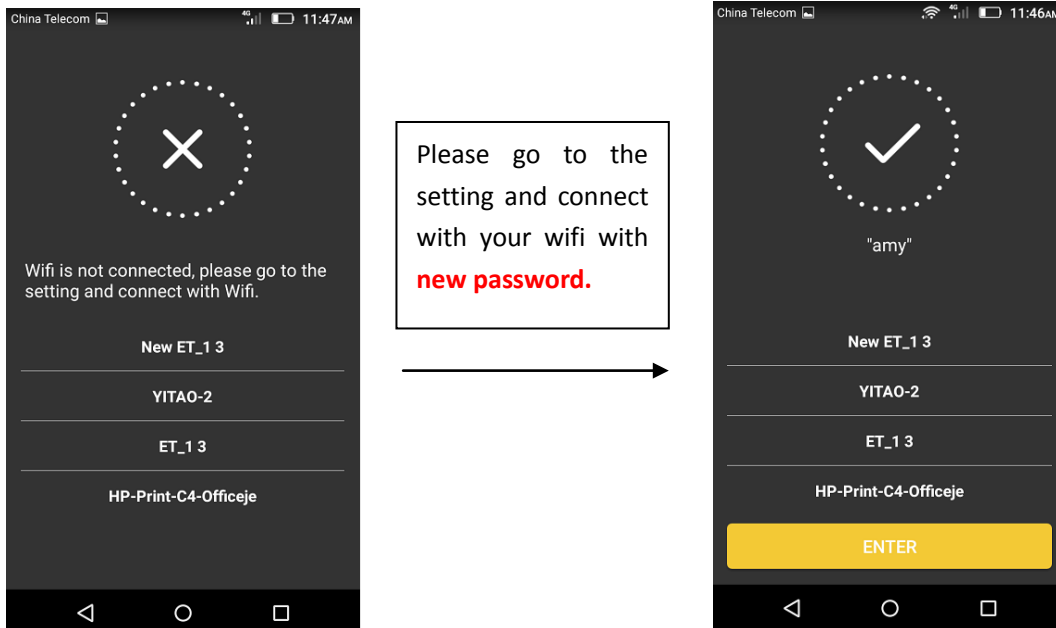


- Set App

 ➤ Change language

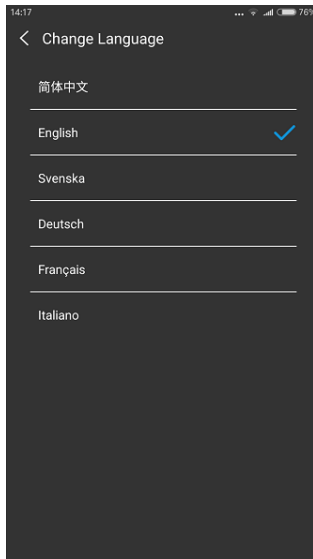

 We have six version languages: Chinese, English, Swedish, German, French, and Italian. After you choose the language, please exit APP completely. You can press the WIFI icon on the middle top of function page, it will return to the enter page, when you enter APP again, the language will be changed to which you choose.

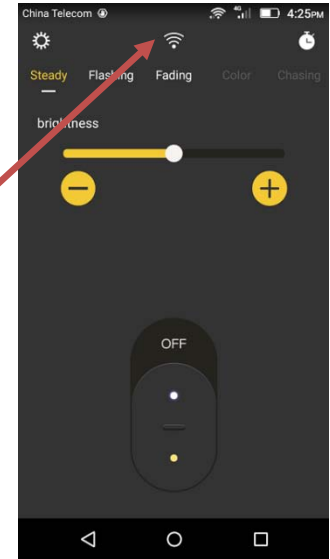

- Reset with button



There are three buttons on the surface of the wifi receiver:
Mode, +, -
Mode: long-pressing 10 seconds can reset wifi receiver. The light will flash one time when it is successfully reset. Short press can change the functions.
+ or - : press them to change the brightness or speed.

- Update version

App will be updated if there are some bugs need to be optimized or we add some new functions. Normally, your mobile phone app store will remind you it has updated version. Or you can also delete it and re-install the APP.

- Troubleshooting instructions

1. If you can't connect with APP successfully, please make sure your wifi name and password are correct.
2. If you forget your password, please long press the button "MODE" on the wifi receiver and reset it, then wifi name and password change to the original ones.

3. If you can connect with APP successfully but can't enter into the APP, please try to forget this WLAN and reconnect it. Or you need to enter mobile phone setting, reset network settings. Then reconnect with APP.
4. If you can't control APP, please make sure there is only one Android mobile phone or only one iPhone connect with it. You cannot have two Android mobile phone or two iPhone connect with APP meanwhile.
5. If you find APP can't control the receiver, the condition looks like stuck, then you'd better plug out the whole lights and plug in again. And make sure reconnected the WLAN correctly.

STAR TRADING AB

APR.21,2017